


Fitting




the Mini Mark II Facia

1

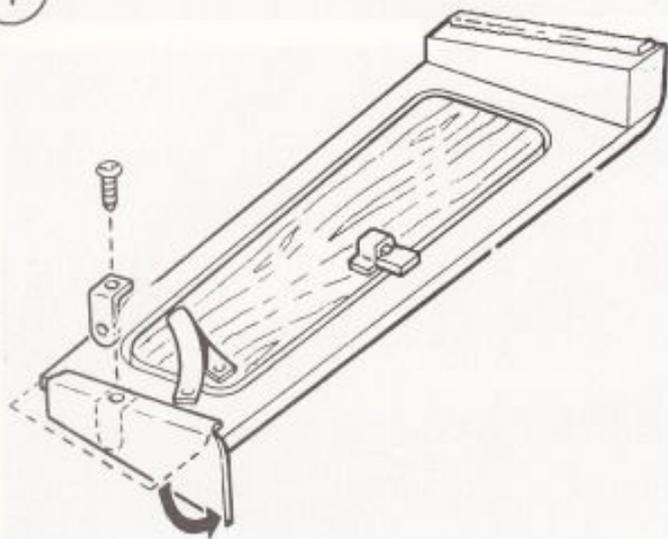


Screw door pulls into holes in face of cubby lids.

2

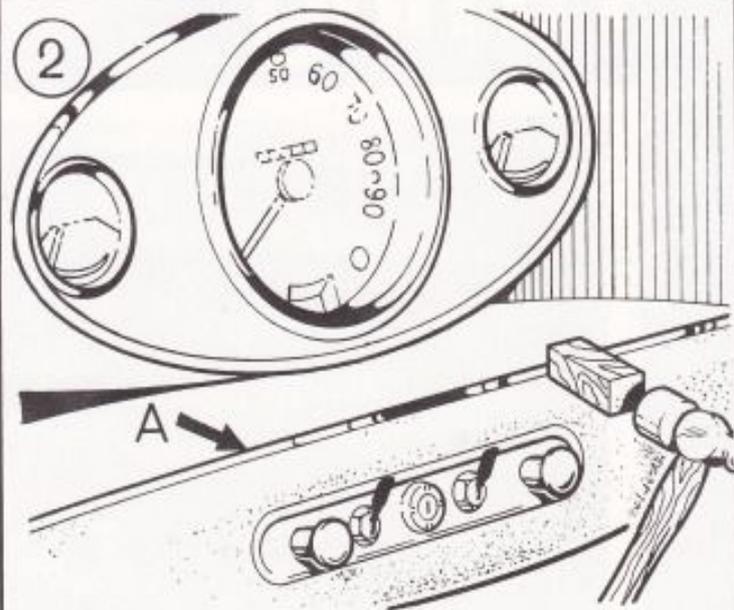

Remove chrome strip (A) by knocking it off the top edge of parcel tray.


6

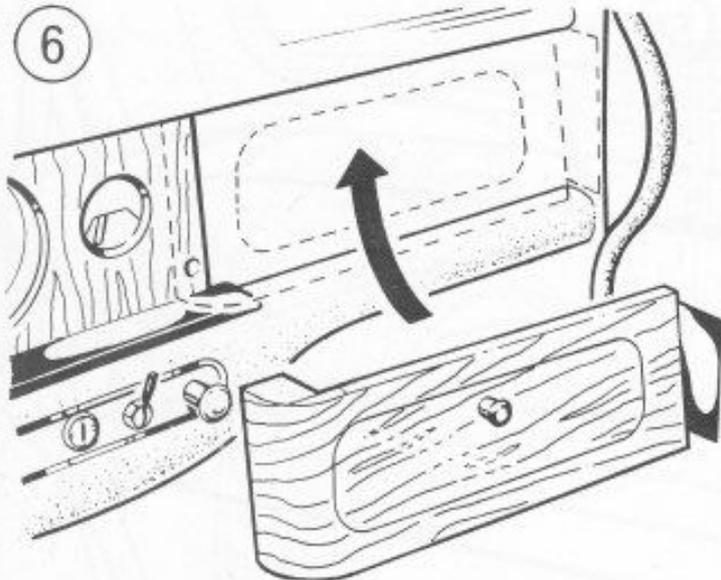


Position polished side panels so that the top edge goes up behind metal screen rail and bottom edge rests on trimmed parcel shelf rail, the radiussed ends to rest against face of centre panel. Push the panels outwards to fit tight against sides of car.

6A


AIR VENT MODELS ONLY

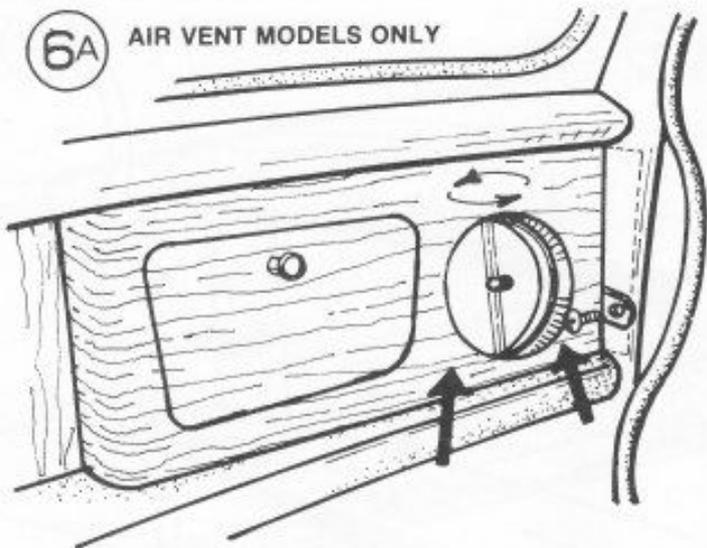

Position polished side panels so that the top edge goes up behind metal screen rail and bottom edge rests on trimmed parcel shelf rail, the radiussed ends to rest against face of centre panel. Swivel air vent round as shown to avoid damage whilst drilling through bracket. Press very firmly back only where arrowed to avoid splitting end panel.

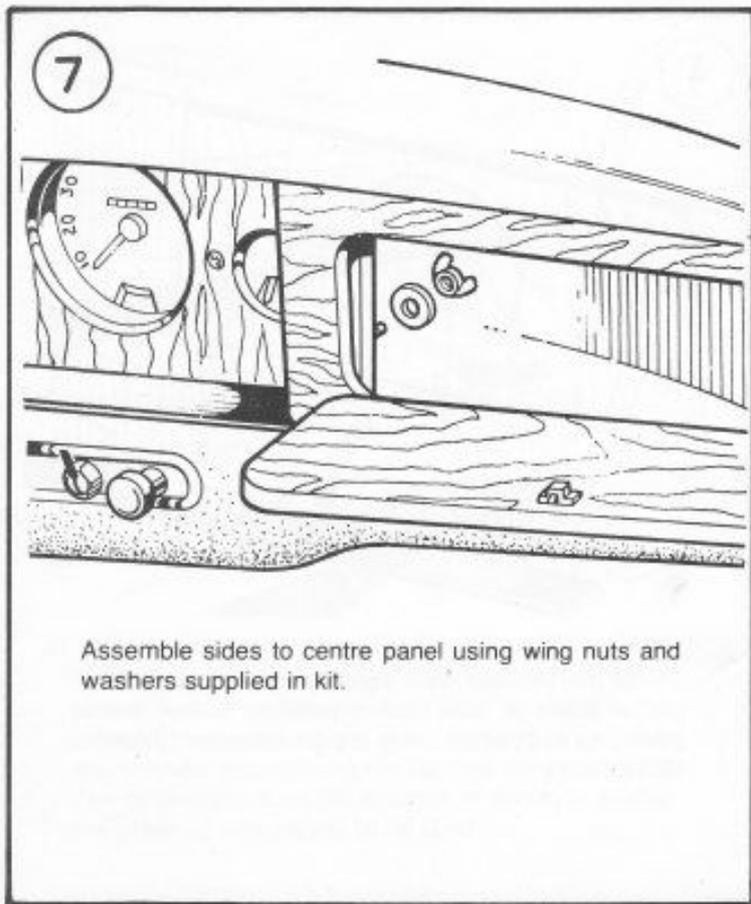

Assemble sides to centre panel using wing nuts and washers supplied in kit.

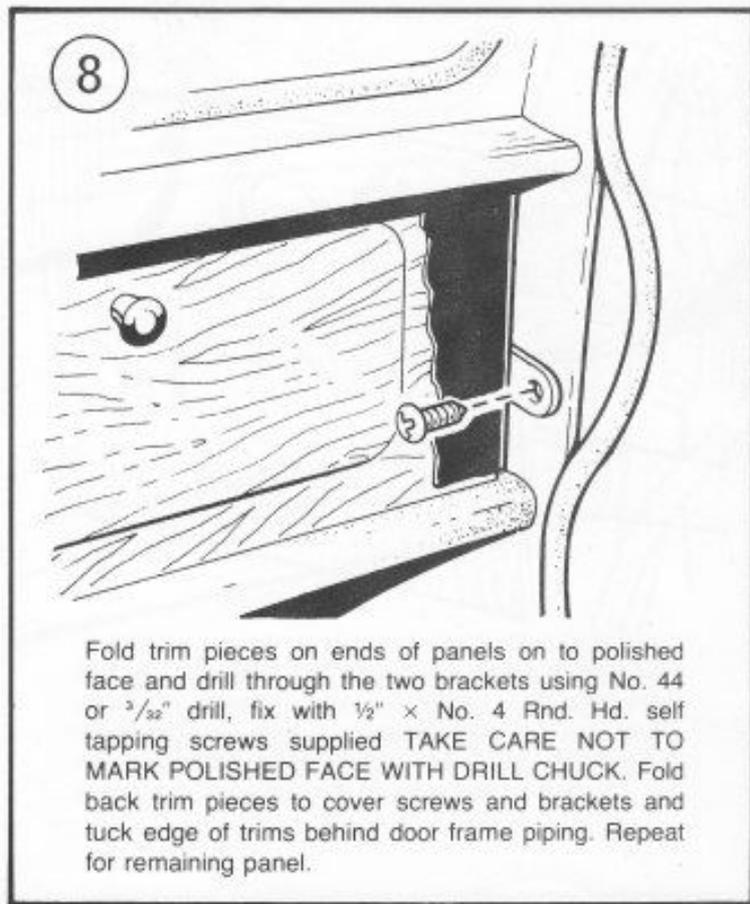

Fold trim pieces on ends of panels on to polished face and drill through the two brackets using No. 44 or $\frac{3}{32}$ " drill, fix with $\frac{1}{2}$ " \times No. 4 Rnd. Hd. self tapping screws supplied TAKE CARE NOT TO MARK POLISHED FACE WITH DRILL CHUCK. Fold back trim pieces to cover screws and brackets and tuck edge of trims behind door frame piping. Repeat for remaining panel.

Rokee Ltd 26, Queen's Road, Coventry CV1 3DQ
Tel: 28689